

VICTOPTICS USER MANUAL FOR T1 1x35 RED DOT SCOPE


5MOA Dot Size

22x23mm Window Size

With Caps

5 Levels Red & Green Dot Intensity

W/ Build-in 21mm Weaver Mount

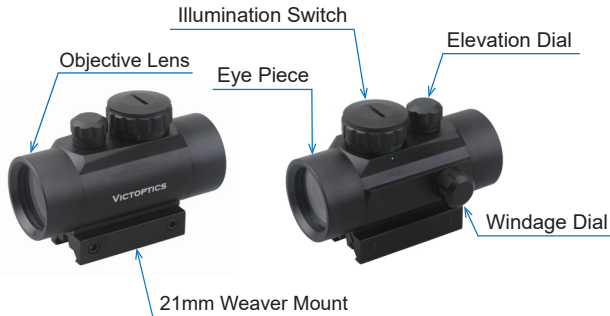

WARNING

Looking directly at the sun through a red dot sight, or any optical instrument, can cause severe and permanent damage to your eyesight.

WINDAGE AND ELEVATION ADJUSTMENTS

1. Before any windage and elevation adjustments is made, loosen the turret cover of the red dot sight.

Note: Excessive adjustments to the windage and elevation may damage the red dot sight.

2. Adjust the elevation and windage with the flat head screwdriver till the reticle is zeroed on the bullet's point of impact.

3. Once the reticle is zeroed in, tighten the turret cover again.

MOUNTING

1. Simply unscrew the weaver mount screws with prepared hex key, this will loosen the mount.
2. Confirm red dot sight is setting on top of the rail and the mounting bolt is located in the rail's groove.
3. Tighten the weaver mount screws firmly.

BATTERY INSTALLING

1. Use a coin or screwdriver to unscrew the illumination switch cap.
2. Remove the used CR2032 battery and insert the new one with the positive (+) side facing up.
3. Fasten the cap firmly to make sure that it is water-tight.

ACTIVATE RED DOT SIGHT

Rotate the illumination switch on top to turn the red dot sight on.

The 1st to the weakest and the 5th to the brightest.

To adjust the brightness level of the dot intensity simply rotate the illumination switch.

Set the illumination switch to zero(0) will turn the unit off.

MAINTENANCE

The red dot sight requires very little routine maintenance other than periodically cleaning the exterior lenses. The exterior of the sight may be cleaned by wiping with a soft, dry cloth.

All components of the sight is permanently lubricated, so no additional lubricant should be applied.

When cleaning the lenses, be sure to use cleaning products or Lens Pen that are designed for use on coated optical lenses.

Note: Other than to replace the battery, do not attempt to disassemble any components of the red dot sight. Disassembling of red dot sight may void warranty.